

# **INSTALLATION**

# FL18<sup>TM</sup>, VP2500<sup>TM</sup>, VP2502<sup>TM</sup>



If you have any questions regarding your device, please call: 1-877-819-0015

#### **INSTALLATION - FL18**

## **Mounting the Device:**

Mount the FL18 under the vehicle's dash, label-side up, using zipties or double-sided tape, in a location that is clear of any metallic obstructions from above that might cause interference with GPS signal reception

## Mounting the Antenna (when applicable):

- Mount the antenna with the 3M tape facing downward, on the front-left side of the dash, near the vehicle's A-pillar
- Route the COM and GPS wires from the antenna down to the FL18 and connect them to the appropriate terminals

## Mounting the Driver ID Reader (when applicable):

- Drill a 3/8" hole in the location on the dash where the driver ID reader will be mounted
- Feed the wires from the driver ID reader through the 3/8" hole and push the reader in
- Secure the reader from the back side using the supplied pushwasher

#### Connect to Power and Ground:

- Locate a constant 12v power source and a suitable chassis ground
- Connect the red wire in the device harness to 12v power
- Connect the black wire in the device harness to ground

### **Connect the Ignition Sense Wire:**

- Using the vehicle's service manual and a digital voltmeter, locate a switched 12v power source (receives power with the ignition in the 'on' position but does not receive power in the 'off' or 'acc' positions)
- Connect the white wire in the device harness to the switched power source

#### Connect the PTO Input (when applicable):

 Connect the yellow wire in the device harness to the PTO trigger's output wire

#### Connect the Driver ID Reader (when applicable):

- Connect the black wire (pin #16) in the device harness to the black wire from the driver ID reader
- Connect the white/blue wire (pin #17) in the device harness to the gray wire from the driver ID reader

## KIT CONTENTS

- Tracking Device
- External Antenna (optional)
- 20-pin I/O cable
- Garmin FMI Cable (optional)
- Driver ID Reader (optional)
- Connectors/Zip Ties

# **IMPORTANT NOTE:**

The switched power source should read ov with the key in the 'off' position and 11-14v in the 'on' position.

# **CAUTION:**


Use the vehicle's factory service manual and a digital voltmeter to be sure that you've located the appropriate wires.

# **REMEMBER:**

For proper operation, there must be an unobstructed line of sight between the FL18 and the sky. Any metallic obstructions from above will result in interference with GPS reception.

If you have any questions regarding your device, please call: 1-877-819-0015

# **INSTALLATION – FL18**

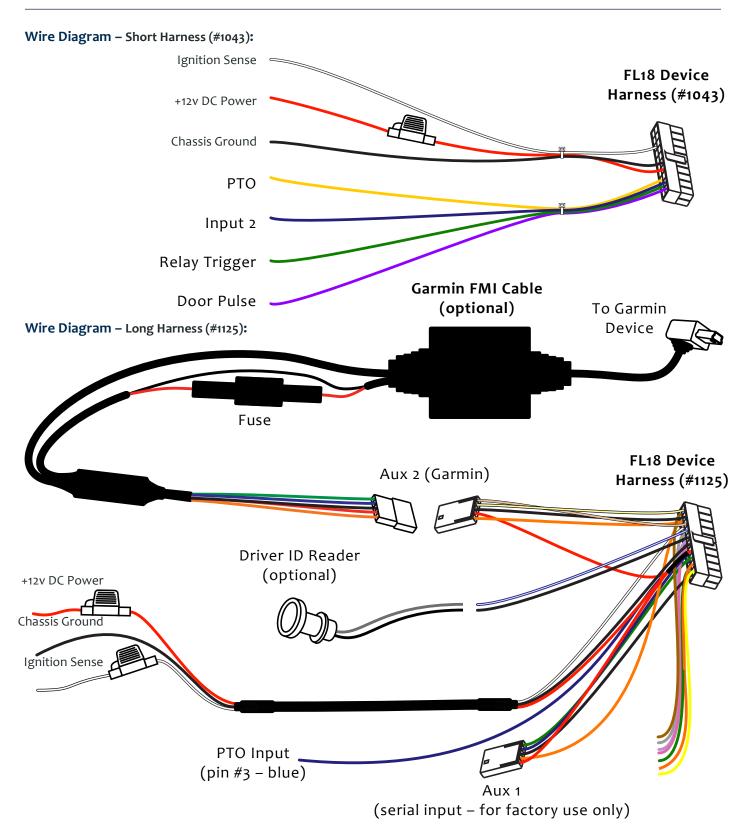

If you have any questions regarding your device, please call: 1-877-819-0015